


# BREAKSAFE CHARGE ISOLATOR

PART NO: 5000CI

THE *BREAKSAFE CHARGE ISOLATOR* IS FOR TRAILERS AND CARAVANS THAT HAVE ONBOARD BATTERIES. THE *BREAKSAFE CHARGE ISOLATOR* HAS AN INBUILT ELECTRONIC MOVEMENT AND VIBRATION SENSOR WHICH SWITCHES THE 12 VOLT CHARGE CIRCUIT OF THE BREAKSAFE "ON" ONLY WHEN THE VEHICLE IS MOVING AND TURNS THE CHARGE CIRCUIT 'OFF' WHEN THE VEHICLE STOPS. THIS ELLIMINATES CONSTANT POWER DRAIN FROM THE ONBOARD BATTERIES WHEN THE VEHICLE IS NOT BEING TOWED.

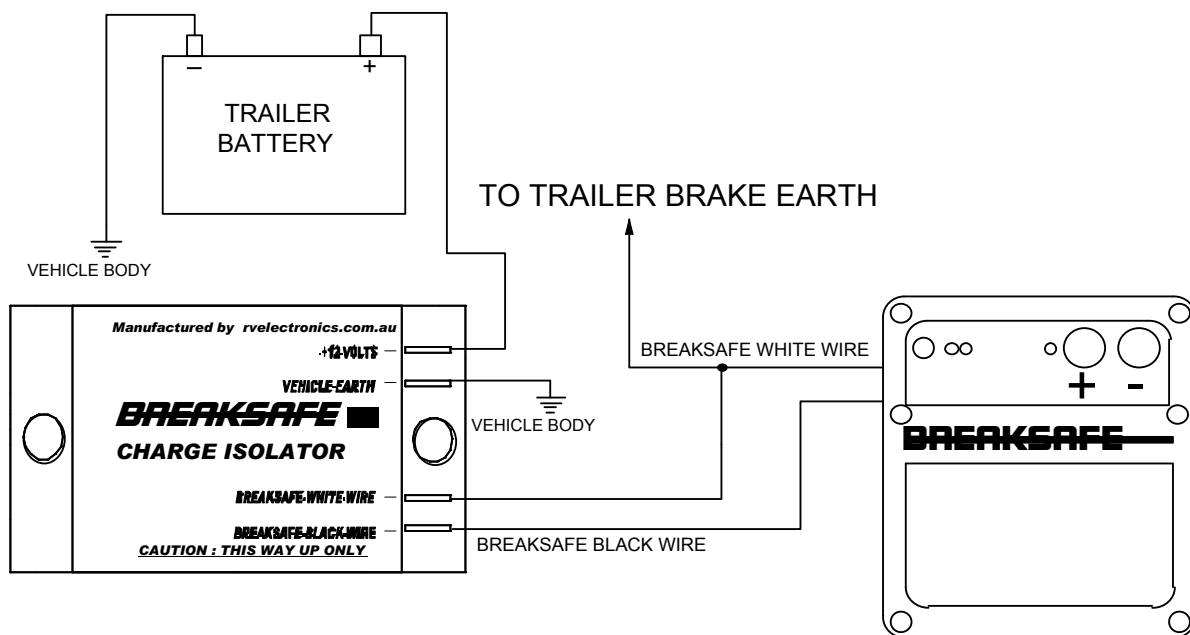

**CAUTION** – DO NOT POSITION THE CHARGE ISOLATOR SIDE WAYS ON A WALL. THE LABEL MUST FACE UPWARD.

**TO TEST**, TAP THE TOP OF THE CHARGE ISOLATOR BOX. THIS WILL ACTIVATE THE BUILT-IN SHOCK SENSOR. THE ON CHARGE L.E.D. INDICATOR ON THE FRONT OF THE BREAKSAFE WILL ILLUMINATE AND THE BREAKSAFE INBUILT BATTERY WILL COMMENCE CHARGING. THE L.E.D. WILL BE ON FOR SEVERAL SECONDS AND THEN TURN OFF. THE HARDER THE TAP THE LONGER THE L.E.D WILL BE ON. WHEN THE VEHICLE STOPS AFTER BEING TOWED IT MAY TAKE UP TO 3 MINUTES FOR THE ON CHARGE L.E.D. TO TURN OFF.

**R.V. ELECTRONICS PTY LTD**

**PHONE (08) 82613500 FAX (08) 82613400**

**[www.rvelectronics.com.au](http://www.rvelectronics.com.au) email - [info@rvelectronics.com.au](mailto:info@rvelectronics.com.au)**